 




ANGEL
CHAMPAGNE

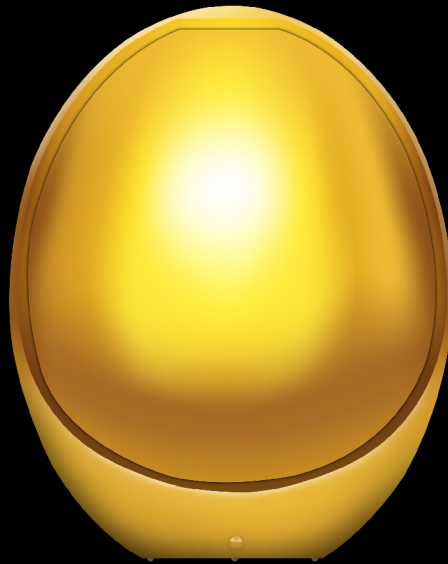

ANGEL CHAMPAGNE
Vintage 2008 Egg

MANUAL

Warnings

- This product contains small parts. Keep out of reach of children under three years of age as there is a risk of accidental ingestion or choking.

Notes

- If you feel ill due to stimulation from strong or flashing lights, stop using the product immediately and consult a physician.
- <<Misusing batteries may cause overheating, rupture, or leakage. Please pay attention to the following.>>
- Never use secondary (rechargeable) batteries.
 - Do not combine old and new batteries or different types of batteries.
 - Ensure that positive and negative terminals are facing the right way.
 - Always turn the product off and remove the batteries after use.
 - Do not short circuit, charge, take apart, or heat up the product, or place the product in fire.
 - In the event that liquid leaking from the batteries gets into your eyes, wash your eyes immediately with large quantities of water and consult a physician. If the liquid gets on your skin or clothing, wash it off with water.
 - Follow guidance from local authorities on disposal procedures when disposing of the product.
 - After use, store the product out of reach of children under three years of age to prevent any unexpected accidents.

Terms of Use

- Read the instruction manual carefully before use and use the product as intended.
- Dispose of packaging materials immediately after opening.
- This product uses precision electronic components. Do not get the product wet or dirty, or take the product apart.
- Do not use the product other than for its intended purpose.
- Do not leave the product near fire. Do not use or store the product in hot and humid places or places exposed to direct sunlight.
- Do not store the product in a refrigerator or freezer.
- Do not use the product in a dishwasher or dish dryer as this may cause deformation or damage.
- Do not subject the product to heavy impact or apply excessive force as this may cause damage or deformation.
- Use the product on a flat surface without incline.
- Do not move the product while a bottle is placed inside.
- Take care to prevent water getting on the battery cover or inside the battery compartment.
- If any water gets on the battery cover or in the battery compartment, dry it off immediately with a cloth.
- Do not touch the metallic parts in the battery compartment or bring them into contact with metallic components. Also, do not touch this area with wet hands.

 
ANGEL JAPAN, Ltd.

40F Izumi Garden Tower,1-6-1 Roppongi, Minato-ku,Tokyo,Japan 106-6040

TEL: +81-3-5357-1801

Email: info@angelchampagne.jp


Main unit

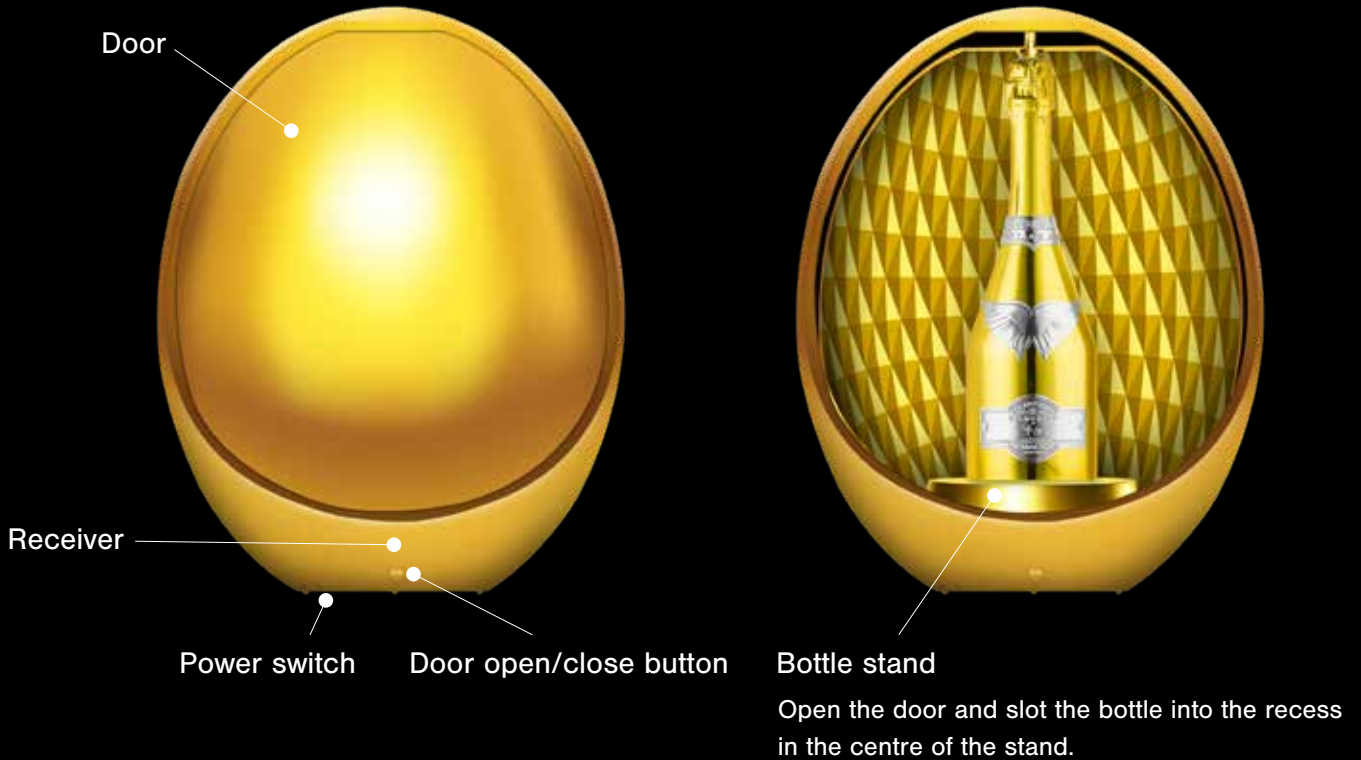

How to insert batteries

AA alkaline batteries × 3
 
<Base>

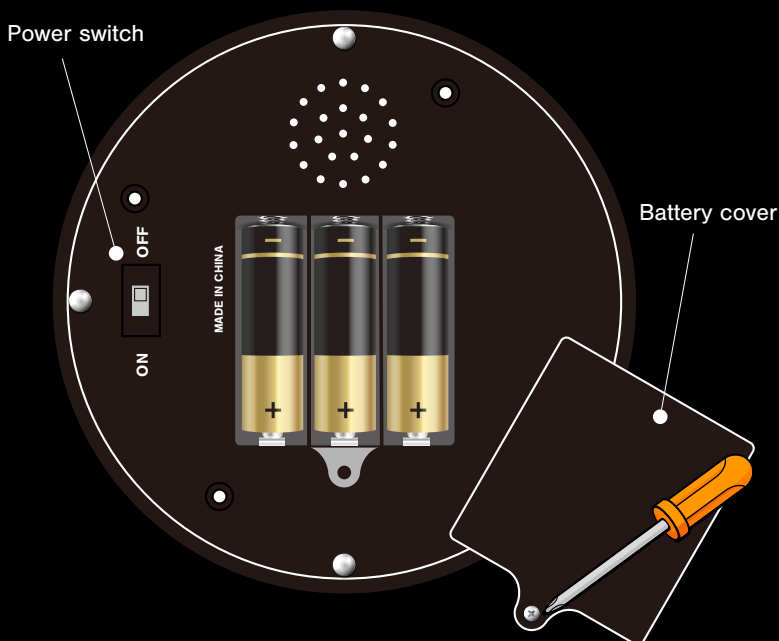

- (1) Remove the battery cover on the base of the main unit by loosening the screw with a Phillips screwdriver.
 - (2) Insert three AA alkaline batteries with the positive and negative terminals facing the right way.
 - (3) Reattach the battery cover and tighten the screw with the Phillips screwdriver in the opposite direction to removal to firmly shut the cover.
- *Make sure to remove the batteries when not using the product for long periods of time.

<Guidelines for replacing batteries>

Battery life

- **Approx. 270 minutes**
(estimated battery life when LEDs are flashing)
- **Approx. 120 minutes**
(estimated battery life when all LEDs are returned and the LED colour is white)

Replace all the batteries with new ones when the sound gets quieter or the LED lights start to dim.


*Battery life varies depending on the operating environment, such as mode and LED colour.

Remote control Internal CR2032 battery



How to replace the remote control battery

If the remote control signal gets weaker or it fails to respond when a button is pressed, replace the internal battery in accordance with the figure below.

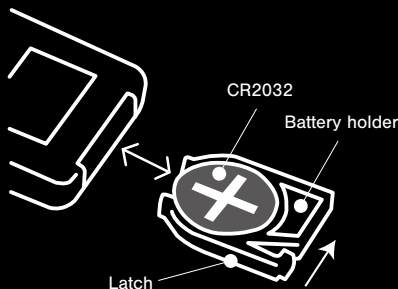

- (1) Release the battery holder at the bottom edge of the remote control by squeezing the latch on the battery holder in the direction of the arrow, then slide the battery holder out.
- (2) Remove the old battery from the battery holder and replace with the new battery, making sure the positive and negative sides are facing the right way.
- (3) Push the battery holder back into the remote control until the latch fully clicks into place.

Contents

Champagne case main body × 1, remote control × 1, AA alkaline batteries × 4, Phillips screwdriver × 1

OPEN / CLOSE



Opens and closes the door

- (1) Turn on the power switch on the base of the main unit.
 - (2) Press the door open/close button on the main unit, or press the door open/close button on the remote control while pointing the transmitter on the remote control at the receiver on the main unit.
- If the door is closed it will open, and if it is open it will close.

If the power switch is turned off when the door is open, the door will close automatically the next time the power switch is turned on.

LED MODE



Changes the LED mode

When the power is turned on and the door is opened for the first time, all LEDs light up. The LED light up mode changes each time the LED mode button is pressed. There are five different modes.

- **MODE1** All LEDs light up. → **MODE2** LEDs light up slowly in sequence.
- **MODE3** LEDs light up randomly. → **MODE4** All LEDs flash quickly.
- **MODE5** All LEDs flash slowly. → All LEDs light up again.

Closing the door resets the mode. The next time the door is opened, all LEDs light up.

LED COLOR



Changes the LED colour

When the power is turned on and the door is opened for the first time, the LEDs light up in the colour that matches the colour of the main unit. The colour changes each time the LED colour button is pressed. There are six different colours.

Closing the door resets the lighting. The next time the door is opened, the colour is set to the first colour of each egg (gold, pink, or blue).

- Vintage 2008 Egg GOLD** Gold → Red → Green → Blue → Pink → White → Six colours
- Vintage 2008 Egg PINK** Pink → Green → Blue → White → Gold → Red → Six colours
- Vintage 2008 Egg BLUE** Blue → Pink → White → Gold → Red → Green → Six colours

VOLUME



Adjusts the volume

The volume can be adjusted to four levels: low, medium, high, and very high. When the power is turned on and the product is used for the first time, the volume is set to high.

Closing the door resets the volume. The next time the door is opened, the volume is set to high.