

ANGEL CHAMPAGNE Vintage 2008  
GODZILLA EDITION

MANUAL

### Warnings

- This product contains small parts. Keep out of reach of children under three years of age as there is a risk of accidental ingestion or choking.

### Notes

- If you feel ill due to stimulation from strong or flashing lights, stop using the product immediately and consult a physician.
- <<Misusing batteries may cause overheating, rupture, or leakage. Please pay attention to the following.>>
- Never use secondary (rechargeable) batteries.
  - Do not combine old and new batteries or different types of batteries.
  - Ensure that positive and negative terminals are facing the right way.
  - Always turn the product off and remove the batteries after use.
  - Do not short circuit, charge, take apart, or heat up the product, or place the product in fire.
  - In the event that liquid leaking from the batteries gets into your eyes, wash your eyes immediately with large quantities of water and consult a physician. If the liquid gets on your skin or clothing, wash it off with water.
  - Follow guidance from local authorities on disposal procedures when disposing of the product.
  - After use, store the product out of reach of children under three years of age to prevent any unexpected accidents.

### Terms of Use

- Read the instruction manual carefully before use and use the product as intended.
- Dispose of packaging materials immediately after opening.
- This product uses precision electronic components. Do not get the product wet or dirty, or take the product apart.
- Do not use the product other than for its intended purpose.
- Do not leave the product near fire. Do not use or store the product in hot and humid places or places exposed to direct sunlight.
- Do not store the product in a refrigerator or freezer.
- Do not use the product in a dishwasher or dish dryer as this may cause deformation or damage.
- Do not subject the product to heavy impact or apply excessive force as this may cause damage or deformation.
- Use the product on a flat surface without incline.
- Do not move the product while a bottle is placed inside.
- Take care to prevent water getting on the battery cover or inside the battery compartment.
- If any water gets on the battery cover or in the battery compartment, dry it off immediately with a cloth.
- Do not touch the metallic parts in the battery compartment or bring them into contact with metallic components. Also, do not touch this area with wet hands.

 
ANGEL JAPAN, Ltd.

Izumi Garden Tower 40F, Roppongi 1-6-1, Minato-ku, Tokyo 106-6040

TEL: +81-3-6807-4030

Email: [info@angelchampagne.jp](mailto:info@angelchampagne.jp)

## Main unit

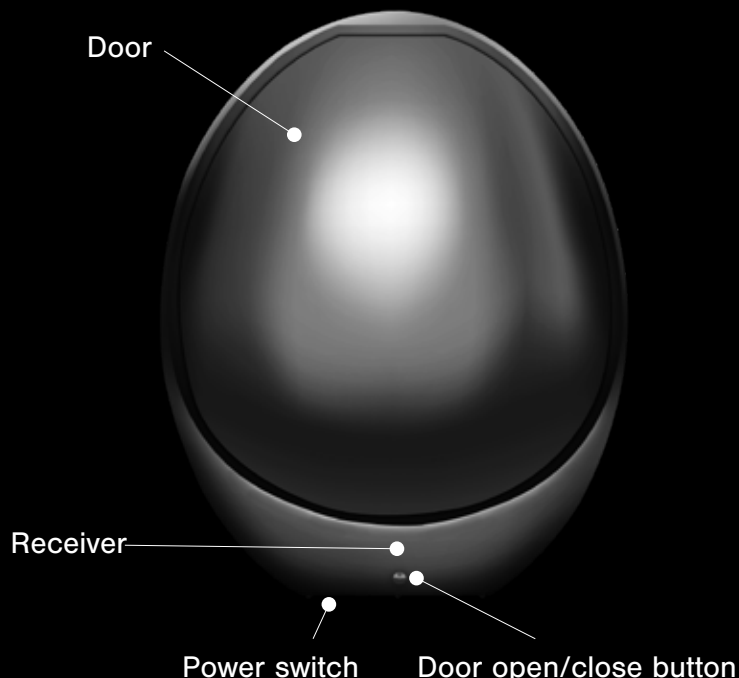


## Bottle stand

Open the door and slot the bottle into the recess in the centre of the stand.

## How to insert batteries

AA alkaline battery × 3
 
<Base>

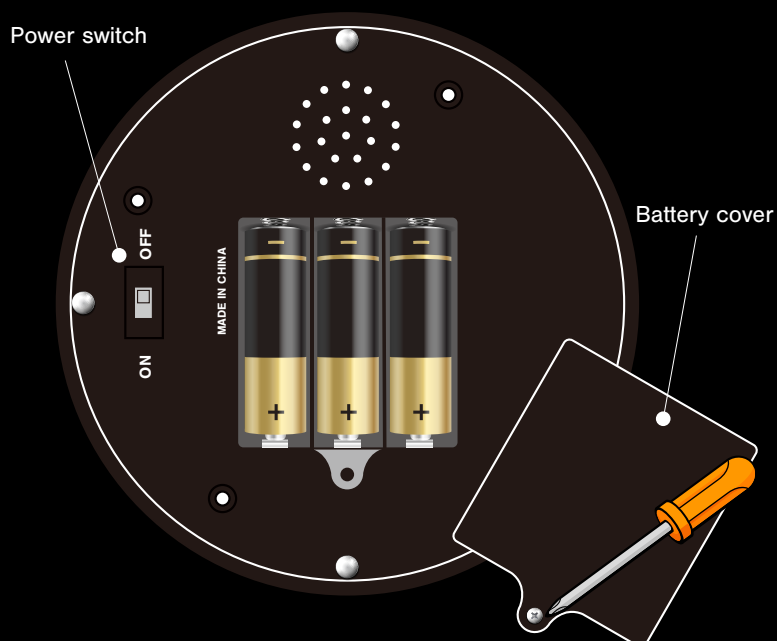

- (1) Remove the battery cover on the base of the main unit by loosening the screw with a Phillips screwdriver.
- (2) Insert three AA alkaline batteries with the positive and negative terminals facing the right way.
- (3) Reattach the battery cover and tighten the screw with the Phillips screwdriver in the opposite direction to removal to firmly shut the cover.

\*Make sure to remove the batteries when not using the product for long periods of time.

## <Guidelines for replacing batteries>

 
### Battery life

If the LEDs on the inner wall and plate remain lit up, either after the door is opened or when LED MODE3 is on (states that consume the most power), battery life is 1 hour (60 min.).

If the remaining battery life is low, LEDs on the plate will flash slowly when the door is open and LED MODE2 or LED MODE3 is on.


## Remote control

Internal CR2032 battery

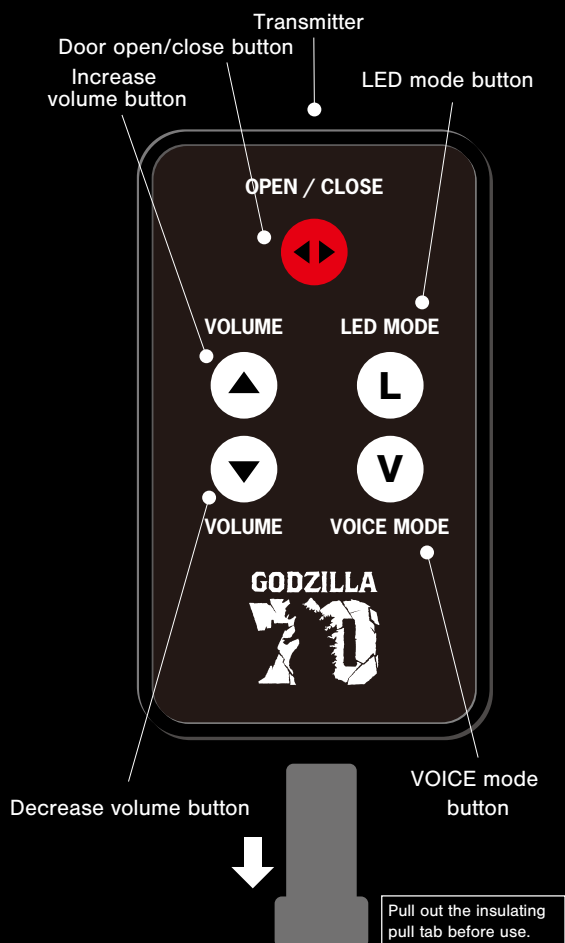

### How to replace the remote control battery

 If the remote control signal gets weaker or it fails to respond when a button is pressed, replace the internal battery in accordance with the figure below.

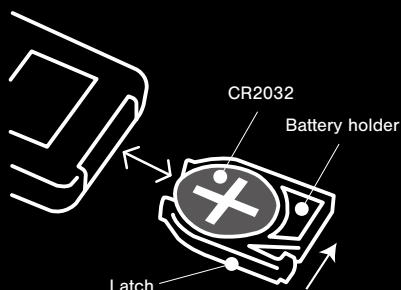

- (1) Release the battery holder at the bottom edge of the remote control by squeezing the latch on the battery holder in the direction of the arrow, then slide the battery holder out.
- (2) Remove the old battery from the battery holder and replace with the new battery, making sure the positive and negative sides are facing the right way.
- (3) Push the battery holder back into the remote control until the latch fully clicks into place.

### OPEN / CLOSE



#### Opens and closes the door

- (1) Turn on the power switch on the base of the main unit.
  - (2) Press the door open/close button on the main unit, or press the door open/close button on the remote control while pointing the transmitter on the remote control at the receiver on the main unit.
- If the door is closed it will open, and if it is open it will close.

**If the power switch is turned off when the door is open, the door will close automatically the next time the power switch is turned on.**

### LED MODE



#### Changes the LED mode

When the power is turned on and the door is opened for the first time, all LEDs light up.

The LED light-up mode changes each time the LED mode button is pressed. There are three different modes.

- | Press LED button (1st time)   | LED MODE1 | Godzilla's skin lights up + Godzilla roar sound                          |
|-------------------------------|-----------|--|
| → Press LED button (2nd time) | LED MODE2 | Godzilla's skin does not light up + plate lights up                      |
| → Press LED button (3rd time) | LED MODE3 | All LEDs on the Godzilla's skin and plate light up + Godzilla roar sound |
| → Back to LED MODE1.          |           |  |

**Closing the door resets the mode. The next time the door is opened, all LEDs light up.**

### VOICE MODE



#### VOICE mode

When the VOICE mode button is pressed, the Godzilla footsteps sound effect is played, followed by the Godzilla roar sound effect. (The button cannot be operated when the door is being opened or closed.)

\*If the VOICE mode button is pressed while the LED mode is on, priority will be given to the VOICE mode.

(If the VOICE mode button is pressed while LED MODE1 or LED MODE3 is on, the VOICE mode's Godzilla roar sound effect will play, followed by the Godzilla roar sound effect of the respective LED mode. LED MODE2 does not have the Godzilla roar sound effect.)

If the VOICE mode button is pressed repeatedly before the Godzilla roar sound effect begins, the Godzilla footprint sound effect will play continuously. Once you stop pressing the VOICE mode button, the Godzilla roar sound effect will play.

### VOLUME



#### Adjusts the volume

The volume can be adjusted to four levels: low, medium, high, and very high. When the power is turned on and the product is used for the first time, the volume is set to high.

**Closing the door resets the volume. The next time the door is opened, the volume is set to high.**

## Contents

Champagne case main body × 1, remote control × 1, AA alkaline battery × 4, Phillips screwdriver × 1